

QX80

2023 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to www.infinitiquickguide.com/2023/qx80 or snap this QR code with an appropriate QR code reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**
- **INFINITI CLIENT SUPPORT 1-800-662-6200**
Support is always available if your INFINITI retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.
- **INFINITI CONNECTION TO ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)**
As part of the INFINITI Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.
- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200**
INFINITI Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.
- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437**
For client support with your INFINITI Financial Services loan or lease.
- **INFINITI FINANCIAL SERVICES www.infinitifinance.com**
Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.
- **OWNER PORTAL 1-855-444-7244 <https://www.infinitiusa.com/owners>**
Your INFINITI Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- **INFINITI INTOUCH® 1-855-444-7244 [infinitiusa.com/intouch](https://www.infinitiusa.com/intouch)**
The suite of services that is your direct link to personal security, convenience and confidence.
- **SiriusXM® RADIO 1-877-447-0011**
For support with your SiriusXM® subscription.
- **INFINITIUSA.COM www.infinitiUSA.com/bluetooth**
Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.
- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**
(Use the Quick Response (QR) code or URL on this page or on the back cover)
- **GENUINE INFINITI ACCESSORIES www.infiniti-techinfo.com**
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.

Table of Contents

Cockpit Overview.....	1	Bluetooth® Streaming Audio	17
Instrument Panel.....	3	Apple CarPlay®.....	18
Meters and Gauges	5	Android Auto™	19
INFINITI Intelligent Key System.....	7	Wireless Charging.....	20
Seat Adjustments.....	8	Navigation System.....	21
Rear Seat Belt Alert.....	9	INFINITI InTouch® Services.....	22
Amazon Alexa (if so equipped).....	9	Voice Recognition.....	23
Rear Door Alert.....	10	Driver Attention Alert (DAA).....	23
Head Restraint Adjustment.....	10	Rear Seat Infotainment (RSI) (if so equipped).....	24
Windows.....	11	Forward Driving Aid Sensors	25
Smart Rearview Mirror.....	11	Parking Brake.....	26
HomeLink® Universal Transceiver	12	Intelligent Cruise Control (ICC).....	26
Exterior Light Operation.....	13	Blind Spot Warning (BSW).....	27
Wiper and Washer Switch	14	Forward Emergency Braking (FEB) with Pedestrian Detection...27	
Sun Visors.....	15	Around View® Monitor with Moving Object Detection.....28	
Fuel-filler Door.....	15	Hill Start Assist	29
Clock Set/Adjustment	15	Lane Departure Warning (LDW).....	29
USB Connection Port Interface.....	16	Back-Up Collision Intervention (BCI).....	30
Connecting your Cellular Phone or Device via Bluetooth®	16		

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch® Owner's Manual and at www.infinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

Cockpit Overview



1

2

3

7

4

5

6

1



Cockpit Overview

- 1 Vehicle information display brightness switches/Trip odometer switch
- 2 Headlight/Turn signal/High Beam/Fog Light switch
- 3 Navigation/Audio control switches
- 4 Wiper and washer switch
- 5 Cruise control switches
- 6 Bluetooth®/Voice Recognition system switches
- 7 Vehicle information display

Instrument Panel



1

2

4

4

3

5

6

8

7

3

Instrument Panel

- 1 Multi-function control touch-screen/RearView Monitor display/Around View® Monitor display
- 2 Audio controls
- 3 Climate control panel
- 4 Climate controlled seat switches (if so equipped)
- 5 Shift lever
- 6 INFINITI controller
- 7 Lower switch bank
 - Headlight aiming control switch (if so equipped)
 - Power liftgate main switch
 - Remote tip-up 2nd row seat switch (if so equipped)
 - Warning systems switch
 - Heated steering wheel switch
- 8 Parking brake (behind steering wheel)

Meters and Gauges



Meters and Gauges

- 1 Tachometer
- 2 Engine coolant temperature gauge
- 3 Shift lever indicator
- 4 Vehicle information display
- 5 Speedometer
- 6 Fuel gauge

INFINITI Intelligent Key System

REMOTE ENGINE START

The remote engine start system must be enabled in the vehicle settings within the vehicle information display. To start your vehicle remotely:

1. Press the lock button (1) to lock the vehicle.
2. Press and hold the remote engine start button (2) within 5 seconds of pressing the lock button (1) and the engine will start.

To start driving, depress the brake pedal and push the ignition switch to the ON position.

State laws may apply, review local laws before using.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch (3) once or press the lock button (1) on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch (3) once; the corresponding door will unlock. Push the door handle request switch (3) again within 60 seconds; all other doors will unlock, or
 - Press the unlock button (4) on the key fob to unlock the driver's side door. Press the unlock button (4) within 60 seconds; all other doors will unlock.

ANSWER BACK HORN



The answer back horn feature can be deactivated by using the Intelligent Key.

- To deactivate the answer back horn feature, press and hold the lock button (1) and the unlock button (4) for at least 2 seconds. The hazard indicator lights will flash three times to confirm that the answer back horn feature has been deactivated.
- To activate the answer back horn feature, press and hold the lock button (1) and the unlock button (4) for at least 2 seconds or more. The hazard lights will flash once and the horn will sound once to confirm that the horn beep feature has been reactivated.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.




Seat Adjustments

- To slide the seat forward or backward, push the  switch ① forward or backward.
- To recline the seatback, push the  switch ② forward or backward.

SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the  switch ① up or down.

LUMBAR SUPPORT

- Push each side of the  adjusting switch ③ to adjust the seat lumbar area until the desired position is achieved.

MEMORY SEAT

- The shift lever must be in **P (Park)** position with the ignition switch in the OFF position.
- The entry/exit function can be activated by pushing **SET** switch ④, located on the driver's side door, for more than 10 seconds.
- To memorize a seat position, push **SET** switch ④, located on the driver's side door, and then the corresponding seat switch for at least 1 second ⑤.

3RD ROW SEATING


- Push the front side of the switch ⑥ located on the passenger side of the cargo room. The corresponding seatback, R: Right side, L: Left side, will fold down automatically.
- Push the rear side of the switch ⑦. The seatback will return upright automatically. Please make sure nothing is in the seat before they are folded down.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Rear Seat Belt Alert

- The rear seat belt alert **1** appears for 65 seconds after the ignition switch is placed in the ON position. This warning shows the status of the rear seat belts. The seat icon will illuminate in red to indicate which seat belt is not fastened - this message is not a malfunction.
- When one of the rear seat belts is buckled, the corresponding rear seat belt warning **1** will appear in gray or green, depending on your model.
- When one of the rear seat belts is unbuckled at a speed less than 10 mph (15 km/h), the rear seat belt warning **1** will appear red.
- After a change in buckle status at speeds exceeding 10 mph (15 km/h), a chime will sound, the seat icon will blink and the warning **1** will appear for another 65 seconds.

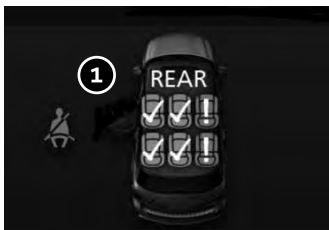

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Amazon Alexa (if so equipped)


- Alexa Built-in can be used as a Virtual Personal Assistant. You can log in to your Amazon account and use Alexa like you would with an Amazon speaker device.

- To get to the Amazon Alexa screen:

- Push **MENU** on the INFINITI controller **1** or touch **MENU** on the Launch Bar.
- Touch the "Alexa" key **2**.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

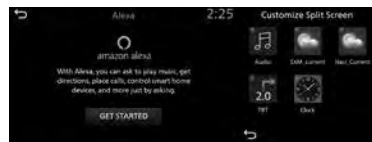

Rear Door Alert

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

TO TURN THE REAR DOOR ALERT SYSTEM ON OR OFF:

- The Rear Door Alert system can be turned ON or OFF through the vehicle information display.

TO DISABLE THE REAR DOOR ALERT SYSTEM:

- When the vehicle is in the **P (Park)** position, a message will appear in the vehicle information display ①. The options "**Dismiss Message**" or "**Disable Alert**" will be listed.
- Push the ◀ switch ② to select "**Dismiss Message**" to clear the display. If no selection is made, the message turns off after a period of time.
- Push the ▶ switch ② to select "**Disable Alert**" to disable the alert for the remainder of the current trip.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Head Restraint Adjustment



To raise the head restraint: Pull the head restraint up.
To lower the head restraint: Push and hold the lock knob ① and push the head restraint down.

Make sure the head restraint is fully engaged in position after any adjustment.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Windows

All power windows can be operated through the main switch on the driver's door.

- 1 Power windows open/close
- 2 Disable passengers' window operation

POWER WINDOW CONVENIENCE OPENING/CLOSING FEATURE

To unlock the vehicle and open the windows simultaneously, press and hold the  button  on the Intelligent Key for about 3 seconds after the door is unlocked.

To stop opening, release the  button .

The window cannot be closed using the Intelligent Key.

Using the mechanical key:


Insert the mechanical key and turn the driver's door key cylinder to the rear of the vehicle for longer than 1 second. The door is unlocked and the window keeps opening while turning the key.


To close the windows, turn the driver's door key cylinder to the front of the vehicle for longer than 1 second. The door is locked and the window keeps closing while turning the key.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

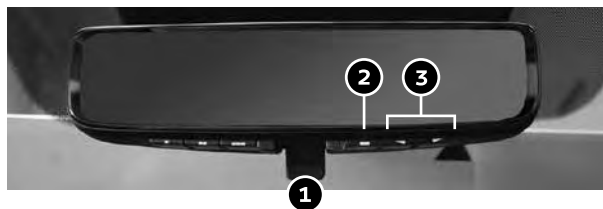

Smart Rearview Mirror



You can switch between the conventional rearview mirror mode and Smart Rearview Mirror mode (camera view mode) by using the mode select lever .

- When the Smart Rearview Mirror mode is on, the settings menu can be selected by pressing the menu button .
- Press the adjustment buttons  to adjust the following settings:
 - Brightness
 - Down/Up
 - Left/right
 - Indication
 - Language
 - Rotation
 - Dimming Mirror

To view a detailed instructional video, go to www.infinitiquickguide.com/2023/qx80 or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

HomeLink® Universal Transceiver

To complete HomeLink® programming, you can download the HomeLink app or read the instructions below.

Before you start programming HomeLink®, park outside and within range of your garage. Then, clear the area around your garage door, place the ignition switch in the ON or ACC position and locate the remote control transmitter, ensuring a fresh battery is installed. Please note, a ladder and secondary person may be needed.

To program HomeLink:

1. Position the hand-held transceiver within 3 in (8 cm) from the HomeLink surface.
2. Press and hold the desired HomeLink button (1) and remote control transmitter button. Continue pressing the button until the indicator light (2) changes to green and "TRAINED" (if so equipped) is displayed in the status area (3) of the mirror.

Before proceeding to the next steps, be sure your garage door is not moving.

- Press the HomeLink button (1) for 2 seconds up to 3 times. If the garage door responds, training is complete.

If the garage door doesn't respond:



- Press the "learn" or "set" button (4) on the garage opener until an indicator illuminates. Within 30 seconds, press the HomeLink button (1) in your vehicle for 2 seconds up to 3 times.

The HomeLink may require 2-Way Communication with your Garage Door to show the position/status of the Garage Door on your HomeLink Screen. Please see the HomeLink website to review these steps.

If the garage door doesn't respond, please see your Owner's Manual, go to www.HomeLink.com/infiniti or call **1-800-355-3515**.

To view a detailed instructional video, go to www.infinitiquickguide.com/2023/qx80 or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

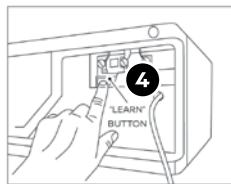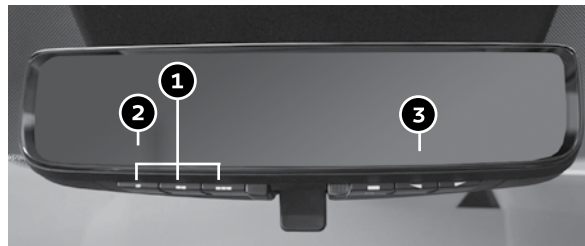

Exterior Light Operation

- 1 OFF position
- 2 Automatic (**AUTO**) headlight mode ON position (headlights switch on/off automatically depending on ambient light conditions/daytime running light system)
- 3 Headlight ON position
- 4 Side lights, license plate lights and combination meter lighting ON position
- 5 Front fog light switch

- 6 Push the headlight switch forward for the high beams.


For High Beam Assist (Auto position):

- When the vehicle speed is less than 22 mph (35 km/h), the headlight returns to low beam.
- To disable high beam auto-dimming, turn headlight switch to headlight ON position (3) or select the low beam position by placing the lever in the neutral position.

- 7 Pull the headlight switch rearward to flash the high beams.

For normal headlight operation, leave the headlight switch in the **AUTO** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

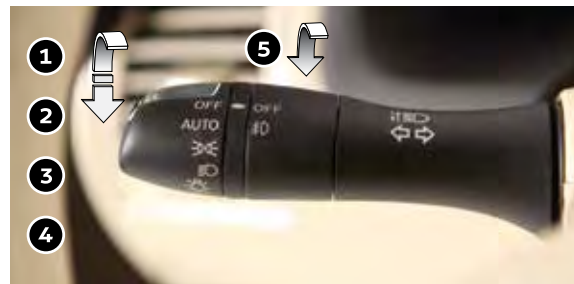

Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
- OFF** Wipers are OFF
- AUTO** Rain-sensing automatic wipe
- LO** Continuous wipe, slow
- HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②.


Pull the lever ① toward you operate the windshield washer.



REAR WIPER AND WASHER

Intermittent (**INT**) – Rear wiper operates intermittently.
Low (**ON**) – Rear wiper operates at a continuous low speed.

Push the lever forward ③ to activate the rear washer.

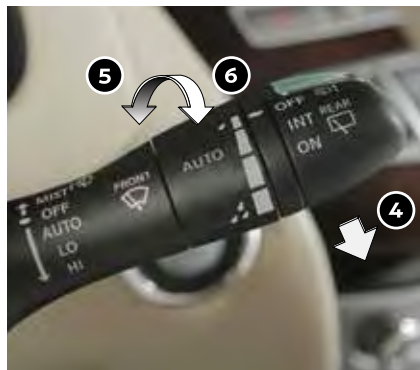

RAIN-SENSING AUTOMATIC WIPER SYSTEM

To set the Rain-Sensing Automatic Wiper System:

- Push the lever down to the **AUTO** position ④.

The rain sensor sensitivity level can be adjusted by:

- Turning the knob toward the rear (Low) for low sensitivity operation ⑤.
- Turning the knob toward the front (High) for high sensitivity operation ⑥.

To turn the Rain-Sensing auto wiper system off, push the lever to the **OFF** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Sun Visors



- 1 Pull down the sun visor to block glare from the front.
- 2 Remove the sun visor from the center mount by lifting it slightly and swing it to the side to block glare from the side window.
- 3 Draw out the extension sun visor from the main sun visor to block further glare.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

Fuel-filler Door



To open the fuel-filler door, unlock the vehicle and then gently push the upper right side of the fuel-filler door.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment



To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button (1) on the INFINITI controller. Then select the "Settings" key on the touch-screen display.
2. Select the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)" and "Time Zone".

Please see your INFINITI InTouch® **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

USB Connection Port Interface



Your vehicle is equipped with two USB ports ① (USB Type-C/USB Type A), located under the control panel, to which you can connect compatible devices (cellular phones, other compatible audio devices, USB memory sticks, etc.).

After connecting your device through one of the USB ports, press the **AUDIO** button on the INFINITI controller to select audio playback from the device connected through the USB ports.

A second device can be connected for charging. In order to switch to the second device for audio playback, both devices will need to be removed and the second device reconnected first.

There are also USB charging ports located in the second row on the back of the center console. These ports will charge compatible devices.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

Connecting your Cellular Phone or Device via Bluetooth®*

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button and touch the "Connections" key.
2. Touch "Devices" and then "Add New". A message is displayed.
3. Operate as guided by the system. (Operations may differ depending on the device.)

The paired cellular phone will be added to the list on the "Connections" screen.



FAVORITE HANDS-FREE PHONE

- You can register a favorite hands-free phone. The phone device name selected as a favorite will be marked with a star.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio

If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **AUDIO** button ① on the INFINITI controller to switch to Bluetooth® Streaming Audio. For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Apple CarPlay®


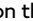 

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.


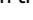 
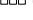 
Connect your compatible iPhone via Bluetooth® or to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key ① or  key ② on the lower left corner of the Apple CarPlay screen.



Press the  button on the steering wheel or touch the  key ① or  key ② on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

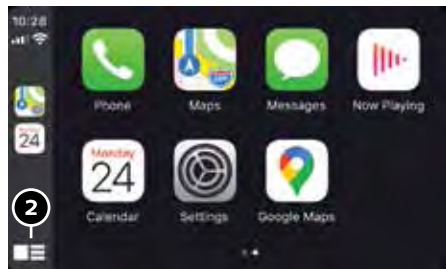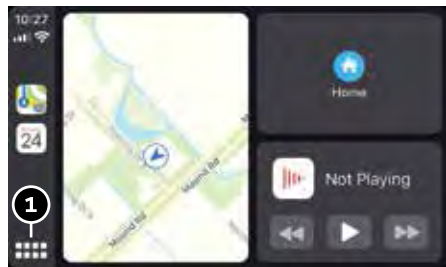

Android Auto™

 
 
Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP


- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

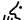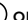

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the touch-screen display.
- Touch “Yes” then “OK” to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the Launch Bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.


To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the exit key.

To return to the Android Auto home screen from the main menu:

1. Press the **MENU** button and touch the  key **3**, or
2. Touch the  key **4**, touch the “Apps” key, and then select the “Android Auto” key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch® Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

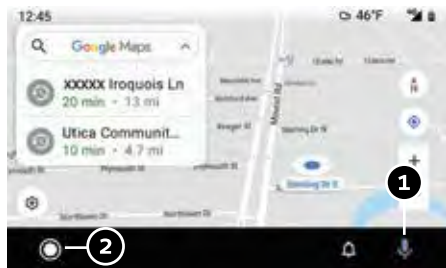

Wireless Charging

The wireless charger is located on the middle part of the instrument panel ①. Lay the smartphone horizontally on the pad of the wireless charger. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position and when all doors are closed. All doors must be closed for charging operation to work properly.

- The indicator ② will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and then turn off.

Smartphone position and phone case type may impact wireless charging.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Navigation System



Use the INFINITI controller ① and **OK** button ② to navigate through the touch-screen display.

- Press the **↶** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the touch-screen.

1. Press the **MENU** button ⑤ on the INFINITI controller.
2. Select the "Destination" key ⑥ on the touch-screen display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE



1. Press the **MENU** button ⑤ on the INFINITI controller.
2. Select the "Cancel" key ⑦ on the touch-screen display.

GUIDANCE VOLUME

- While guidance is being announced, the guidance volume can be adjusted by turning the audio system volume knob.
- The guidance volume can also be adjusted in the "Settings" menu.

1. Press the **MENU** button ⑤ on the INFINITI controller.
2. Select the "Settings" key and then the "Volume & Beeps" key ⑧ on the display.
3. Next, select the "Guidance Volume" key. Use the "-" and "+" keys ⑨ to adjust the volume.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

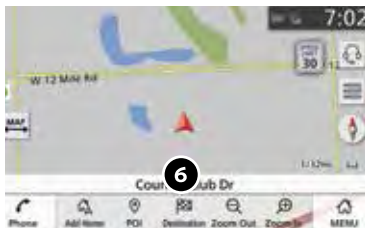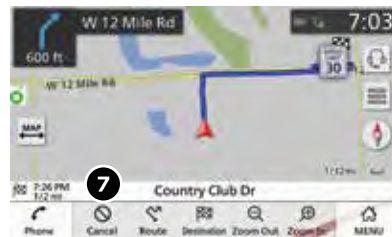

INFINITI InTouch® Services

If equipped, your vehicle may include INFINITI InTouch® connected features and services such as Emergency SOS Calling, Automatic Collision Notification, Remote Services, Navigation, Bluetooth® and more.

For complete information about your INFINITI InTouch® services and features, please visit [infiniti.com/intouch](https://www.infiniti.com/intouch) or call **1-855-444-7244**. For frequently asked questions, please visit www.infiniti.com/intouch/faq.

To access INFINITI InTouch® Services:

1. Press the **MENU** button (1) on the INFINITI controller.
 2. Touch **SETTINGS** on the Launch bar.
 3. Select the "InTouch Services" key (2) on the touch-screen display.
- Press the in-vehicle telematics **SOS** button (3) (if so equipped) in case of an emergency, located above and in front of the rearview mirror.



INFINITI INTOUCH® SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account.
(<https://www.infiniti.com/owners>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch® Services.
3. Download the INFINITI InTouch® Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Available services may include:

- Automatic Collision Notification
- Emergency SOS Calling

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.


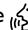 

Voice Recognition



SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.


USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.


Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Driver Attention Alert (DAA)

The Driver Attention Alert (DAA) system alerts the driver if the system detects a lack of attention or driving fatigue.

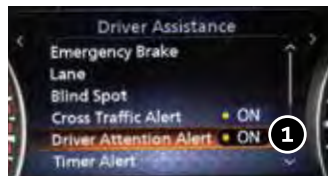

- When Driver Attention Alert ① is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break:

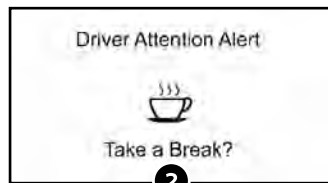

- If the system detects that driver attention is decreasing, the "Take a Break?" message ② appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Rear Seat Infotainment (RSI) (if so equipped)


With this entertainment system, you can play video files on the rear display screens (1). Sound will play from the vehicle's audio system, the wireless headphones provided in the kit, or your own wired headphones after connecting them to the headphone jacks.

REAR DISPLAYS

To turn the rear displays on and off:


1. Push the ignition switch to the **ON** position.
2. Press the  button (2) on the top of each monitor or the remote control (3).
3. Press the A or B button on the remote to choose which monitor to control.
 - Use the remote control or the buttons on the corresponding monitor control panel to operate the rear display screens.
 - Use the headphones (4) provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired headphones to the headphone jacks (5) located on the corresponding monitor control panel.
 - To use the wireless headphones, select A or B on the remote control to use MONITOR A or MONITOR B.
 - Navigate to "Source" (6) by using the directional pad on the remote to cycle through the available video sources.

WATCHING VIDEOS


- Connect your compatible device to the USB connection port, HDMI port or insert a SD Card into the SD card slot located on the left side of the monitor when the screen is in the open position.
- Press the  button on the remote (7) or on the monitor to get to the HOME screen.
- Select "Source" (6) then select a media source from the Home screen to begin or resume playback.

Connecting to certain devices require manufacture specific cables to work properly (not included).


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

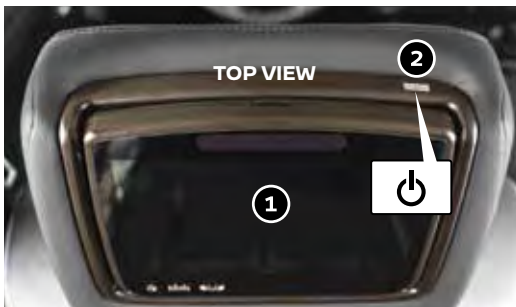

MONITOR A

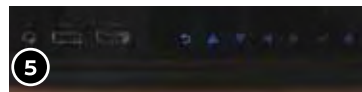 

MONITOR B

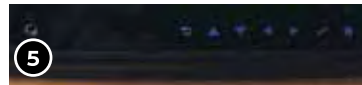 

Forward Driving Aid Sensors

A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror ① and the radar sensor is located on the front of the vehicle ②. Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:

- Intelligent Cruise Control (ICC) (if so equipped)
- Forward Emergency Braking (FEB) with Pedestrian Detection

The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" ③ warning may illuminate if the front radar sensor is obstructed.

The warning light ④ may illuminate and blink if the front camera sensor ① is obstructed. Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc.).

If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by an INFINITI retailer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual ③



Parking Brake



To apply the parking brake, fully depress the parking brake pedal ①.

To release the parking brake:

- Firmly apply the foot brake ②.
- Depress the parking brake pedal ① and the parking brake will be released.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Intelligent Cruise Control (ICC)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.


VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To turn on the vehicle-to-vehicle (ICC) cruise control mode, quickly push and release the MAIN switch ①.
- To increase the distance to the vehicle ahead to be maintained by the ICC system, push the distance switch ② until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ③.
- When a vehicle is detected ahead, a vehicle ahead detection indicator ④ will illuminate and your vehicle will reduce the speed to match the slower vehicle.


CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To turn on the conventional (fixed speed) cruise control mode, push and hold the MAIN (ON OFF) switch ① for longer than about 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

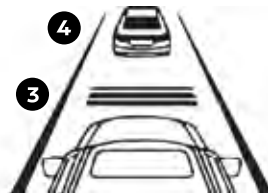

Blind Spot Warning (BSW)

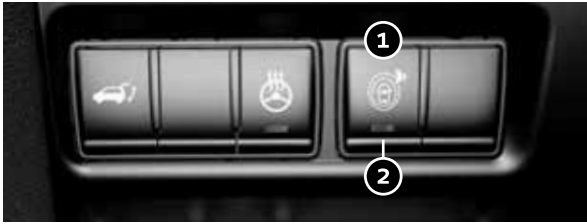

- The Blind Spot Warning (BSW) can help alert the driver of other vehicles in the blind spot area when changing lanes.
- When the Warning Systems switch ① is turned off, the warning systems ON indicator light ② on the switch is off.

TURNING BLIND SPOT WARNING ON OR OFF

- The BSW can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Forward Emergency Braking (FEB) with Pedestrian Detection

- The Forward Emergency Braking (FEB) system can assist the driver when there is a risk of a forward collision with the vehicle ahead in the traveling lane or with a pedestrian.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light ① will illuminate. If the driver applies the brakes after the warning and the FEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB will issue a second flashing visual warning ②, an audible warning and also apply partial braking.



TURNING FORWARD EMERGENCY BRAKING (FEB) WITH PEDESTRIAN DETECTION ON OR OFF

- Forward Emergency Braking with Pedestrian Detection can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


Around View[®] Monitor with Moving Object Detection

- With the ignition switch in the **ON** position, activate the Intelligent Around View[®] Monitor by pressing the **CAMERA** button ①, located on the INFINITI controller or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Green **MOD** icon ②; the system is active.
 - White **MOD** icon ②; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The **MOD** system will not operate if the liftgate is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

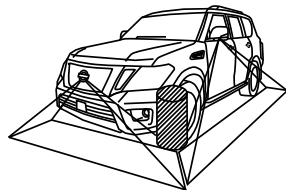

Hill Start Assist

The Hill Start Assist system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The Hill Start Assist system will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Lane Departure Warning (LDW)

Lane Departure Warning (LDW) warns you if the vehicle is beginning to leave the traveling lane.

- LDW is activated at speeds of 37 mph (60 km/h) and above and the lane markings are clear.
- If a front wheel passes over a lane marking, LDW will warn you through a visual alert ① and an intermittent vibration in the steering wheel.
- The Warning Systems switch ② is located in the lower switch bank.



TURNING LANE DEPARTURE WARNING ON OR OFF

- LDW can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Back-Up Collision Intervention (BCI)

The BCI system can help alert the driver of an approaching vehicle or objects behind the vehicle when backing out of parking spaces.

- BCI system will turn on when the shift lever is in reverse and the vehicle speed is less than 5 mph (8 km/h).
- A warning chimes and the indicator light ① located on the outside mirrors will illuminate and indicators will appear on the touch-screen display ②.

TURNING BACK-UP COLLISION INTERVENTION (BCI) ON OR OFF

- The BCI system can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Memo




Printing September 2022
QR23EA 0Z62U1
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infiniti.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to www.infinitiquickguide.com/2023/qx80 or snap this QR code with an appropriate QR code reader.

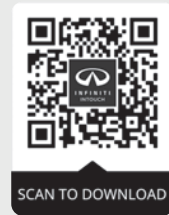

For vehicles equipped with remote connectivity, including an SOS button, scan to download in the smartphone app.



INFINITI®