



QUICK REFERENCE GUIDE

2023 **ROGUE**

COCKPIT OVERVIEW



1

2

3

4

10

11

5

6

7

8

9

COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light (!)
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Idling Stop OFF Switch 
- 6** Steering Assist Switch 
- 7** Head up Display (HUD) 
- 8** Instrument Brightness Control
- 9** Power Liftgate Switch 
- 10** Steering Wheel Switches for Audio Control / Navigation / Vehicle Information Display
- 11** Cruise Control / Bluetooth® / ProPILOT Assist Switches

INSTRUMENT PANEL



1

2

3

4

5

6

INSTRUMENT PANEL

- 1** Steering Wheel Tilt and Telescopic Adjustment
- 2** Hood Release 
- 3** Audio and Navigation System
- 4** Heated Steering Wheel Switch 
- 5** Heater and Air Conditioner (automatic)
- 6** USB Connection Port Interface / Power Outlet

TABLE OF CONTENTS

GETTING STARTED

Nissan Intelligent Key® System (if so equipped)	3
Front Power Seat Adjustments (if so equipped)	5
2 nd Row Seats	5
Memory Seat (if so equipped)	6
Rear Door Alert	6
Door Locks	7
Starting/Stopping the Engine	7
Tilt and Telescopic Steering Wheel Adjustments	8
Outside Mirror Control Switch	8
Electronic Shift Lever	9
Automatic Anti-glare Rearview Mirror (if so equipped)	10
Emergency Call (SOS) Button (if so equipped)	10
Heater and Air Conditioner (automatic) (if so equipped)	10
Heated Steering Wheel and Seats (if so equipped)	12
Headlight Control Switch	13
Wiper and Washer Switch	14
Sun Visors	15
Vehicle Information Display	15
Outside Temperature Display	17
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	17
Capless Fuel Fill and Fuel-filler Door	18
Adjustable Luggage Floor (if so equipped)	18
Towing Your Vehicle	19
Power Liftgate (if so equipped)	19
Motion-Activated Liftgate (if so equipped)	20
Automatic Moonroof (if so equipped)	21
Rear Sunshade (if so equipped)	21
Jack/Tool Storage	21

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

System Updates	23
How to use your Rogue's Touch-Screen Display	25
Clock Set/Adjustment	26
USB Connection Port Interface	26
How to Connect your Phone/Device	26



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

TABLE OF CONTENTS

Bluetooth® Hands-free Phone System	27
• System Operating Tips	27
FM/AM/SiriusXM® Radio	29
Apple CarPlay®	30
Android Auto™	31
Wireless Charging (if so equipped)	32
Navigation System (if so equipped)	32
NissanConnect® Services Powered by SiriusXM® (if so equipped)	33
Voice Recognition	35
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	36
Wi-Fi	36
Hands-Free Text Messaging Assistant (if so equipped)	37
Amazon Alexa Integration (if so equipped)	38
Functions Disabled while Driving	38

DRIVING FEATURES

Electronic Parking Brake	39
Forward Driving Aid Sensors (if so equipped)	39
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA)	40
ProPILOT Assist (if so equipped) and ProPILOT Assist with Navi Link (if so equipped) ...	41
Cruise Control (if so equipped)	45
Automatic Emergency Braking (AEB) with Pedestrian Detection System	46
Intelligent Around View® Monitor (if so equipped)	47
Drive Mode Selector	49
Rear Automatic Braking (RAB)	50
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI)	50
Hill Start Assist	51
Intelligent Driver Alertness (I-DA)	51
Idling Stop System (if so equipped)	52
Front and Rear Sonar System (if so equipped)	52
Traffic Sign Recognition (TSR) (if so equipped)	52
Head Up Display (HUD) (if so equipped)	53



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL® (if so equipped)

- The remote start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (Park)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.

- To start your vehicle remotely:

1. If the doors are unlocked, press the  button **1** to lock all doors.
2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.

- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.

- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled and the vehicle driven more than 4 mph (7 km/h) before the remote start can be used again.
 - To cancel the remote engine start, press the  button **2**.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** on any door, push the liftgate request switch **4** or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - When you push the driver's door handle request switch **3** or the liftgate request switch **4**, the corresponding door or the liftgate will unlock. Push the request switch on any other door within 1 minute; all other doors and the liftgate will unlock, or
 - Press the  button **5** on the key fob to unlock the driver's side door. Press the  button **5** again; all other doors will unlock.



- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 second. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or press the door request switch if the key fob is in range.

LIFTGATE RELEASE

- To open the liftgate, press the  button **7** for longer than 1 second.
- To close the liftgate, press the  button **7** for longer than 1 second.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Push the park button to shift to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Push the ignition switch while depressing the brake pedal within 10 seconds after the chime sounds. The engine will start.

DRIVER PROFILES (if so equipped)

- This feature allows 3 drivers to use their own registration, such as audio, etc. settings, and memorizes these custom driver profiles.
- Up to three users can be registered. When the system is started with an Intelligent Key that has been registered, a message asking if you wish to register yourself as a user is displayed:
 1. Touch "Yes" on the user registration screen to register.
 2. The New User Registration screen is displayed. Enter the user information.
 3. After inputting user information, touch "Save" to complete user registration.

APPROACH UNLOCK FUNCTION (if so equipped)

- When you approach the vehicle with the Intelligent Key, the vehicle will be unlocked automatically by the approach unlock function. This function is disabled by the default setting. You can enable this function by the vehicle information display.

WALK AWAY LOCK FUNCTION (if so equipped)

- When you walk away from the vehicle with the Intelligent Key, the vehicle will be locked automatically by the walk-away lock function. This function is disabled by the default setting. You can enable this function by the vehicle information display.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (Section 5)" and the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

GETTING STARTED

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

SEAT ADJUSTMENT CONTROLS LOCATION

- The Front Power Seat Adjustment switches are located on the outside sides of the driver and passenger seat.
- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT TILT AND LIFT (if so equipped for driver's seat only)

- To raise or lower the front and back portion or height of the seat, push the back and front end of the switch **1** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat only)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

2ND ROW SEATS

- To lay the seatback down:
 - Lift the seatback release lever **1** to fold the seatback forward.
- To lay the 2nd row seats down flat (if so equipped):
 - Open the rear liftgate and locate the 2nd row seat levers on both sides of the vehicle **2**.
 - Pull both levers **3** at the same time to release the 2nd row seats.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

MEMORY SEAT (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the Memory Seat system.
- Follow this procedure to set the memory positions:
 - Place the ignition in the ON position and confirm the vehicle is in the **P (Park)** position.
 - Adjust the driver's seat and outside mirrors to the desired position using each adjusting switch.
 - Push the **SET** switch **1**, and within 5 seconds, push the memory switch **(1 or 2)** **2**.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a chime will sound.
 - The driver's seat and outside mirrors are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being started.

REAR DOOR ALERT (ACTIVE)

- When the system is active, the horn will sound and a **Check Rear Seat for All Articles** warning **1** will appear on the display.
- To activate Rear Door Alert, in your vehicle information display:
 - Press the scroll/**OK** dial on the steering wheel until the "Settings" menu screen appears. Press the scroll/**OK** dial to make the selection.
 - Select "Vehicle Settings", "Rear Door Alert" and press the scroll/**OK** dial.
 - Choose from the following options: "OFF", "Horn & Alert" or "Alert Only", and then press the scroll/**OK** dial.
- To Dismiss Rear Door Alert:
 - Use the scroll/**OK** dial on the steering wheel to select "Dismiss Message" **2**. If no selection is made, this message will disappear after a period of time.

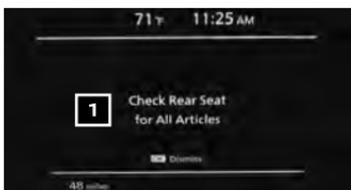

GETTING STARTED

- To temporarily disable Rear Door Alert for the remainder of the current trip, use the scroll/OK dial on the steering wheel to select "Disable Alert" **3** and press the scroll/OK dial.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

DOOR LOCKS

- All doors lock automatically when the vehicle speed reaches 15 mph (24 km/h).
- All doors unlock automatically when the transmission is placed in the **P (Park)** position or when the ignition switch is placed in the OFF position, depending on the option selected in the "Vehicle Settings" menu.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Apply the parking brake.
- Confirm that the vehicle is in the **P (Park)** position.
- Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

- Push the **P (Park)** button and push the ignition switch to the OFF position.

AUTO ACC POSITION

- With the vehicle in the **P (Park)** position, the Intelligent Key with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver side outside mirror or push the right switch **2** to select the passenger side outside mirror. The indicator light on the selected mirror switch will illuminate.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.

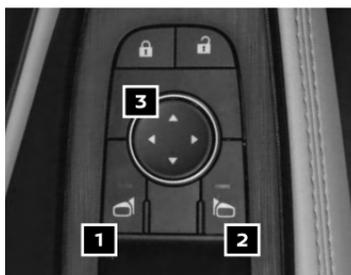

REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn the selected or both (depending on the model) outside mirror surfaces downward to provide better rear visibility close to that side of the vehicle.
 1. Place the ignition switch in the ON position.
 2. Using **1** or **2**, choose which mirror or both mirrors (depending on the model) to tilt down when **R (Reverse)** is selected.
 3. Move the shift lever to the **R (Reverse)** position.
 4. One or both outside mirrors (depending on the model) will move to the reverse tilt-down position. While in **R (Reverse)**, you can adjust the selected mirror's tilt-down position using **3**.
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 1. The shift lever is moved to any position other than **R (Reverse)** for a short period of time.
 2. The selected mirror or mirrors are deselected using the left switch **1** or the right switch **2**.
 3. The vehicle speed increases to more than 5 mph (8 km/h).
 4. The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED

ELECTRONIC SHIFT LEVER

- The electronic shift lever will return to a home position after each operation. Successful gear selection is not indicated by the physical position of the shift lever. Instead, successful gear selection is indicated by gear position indicators on the shift lever and in the meter display.
- Before shifting, ensure that the engine is running and the brake is applied.

To shift to **R (Reverse)**:

- Press the shift lever button **1** and slide the lever forward fully. The **R** on the shift lever will illuminate, and **R** will be displayed in the meter display.

To shift to **D (Drive)**:

- Slide the lever rearward fully. The **D** on the shift lever will illuminate, and **D** will be displayed in the meter display.

To shift to **N (Neutral)**:

- Without pressing the shift lever button, slide the lever forward or rearward partially until you feel a slight increase in effort. Hold this position for approximately 0.5 seconds. The **N** on the shift lever will illuminate, and **N** will be displayed in the meter display.

To shift to **P (Park)**:

- Press the **P (Park)** button **2** on the shift lever.
 - Park is automatically engaged if you switch off the ignition or if you unfasten your seat belt and open the driver's door to exit the vehicle in **R**, **N** or **D**.
- The Neutral Hold mode function enables you to exit the vehicle while in **N (Neutral)** position:
 1. Depress and hold the brake pedal
 2. Release the electronic parking brake
 3. Push the **P (Park)** button
 4. Slide the shift lever to the **N (Neutral)** position and hold it for 0.5 seconds until "**N**" appears in the vehicle information display
 5. Slide the shift lever to the **N (Neutral)** position again and hold it for 0.5 seconds, until a message "Neutral Hold Mode has been activated" appears in the vehicle information display.
- To cancel Neutral Hold Mode, shift to **P**, **R**, or **D** while the engine is running.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



AUTOMATIC ANTI-GLARE REARVIEW MIRROR (if so equipped)

The inside mirror is designed so that it automatically dims during night time conditions and according to the intensity of the headlight of the following vehicle.



The anti-glare system will be automatically turned on when the ignition switch is placed in the ON position.


- Do not hang any objects on the mirror or apply glass cleaner. Doing so will reduce the sensitivity of the sensor **1**, resulting in improper operation.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of emergency.
- To use this feature, press the switch cover **1** to release, then press the **SOS** button **2** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call 1-855-426-6628.

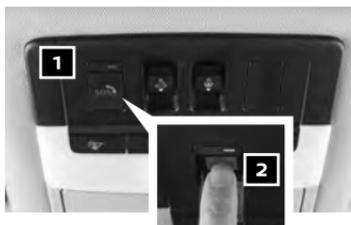

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

GETTING STARTED

2 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

3 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

4 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side and rear heater temperature controls on or off. Turn the passenger side temperature control dial right or left to adjust passenger temperature independently of the driver temperature. Push the rear temperature buttons located on the back of the center console to adjust the rear temperature independently from the front temperature.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

5 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON-OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

6 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

8 AIR FLOW CONTROL BUTTON

- Press the **AIR FLOW CONTROL BUTTON** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents and partly defroster.
 -  Air flows from the front defroster and foot vents.

9 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster  button **9**. If it is difficult to defrost the windows, press the **A/C** button **6**. This feature removes humidity from the air.

- Turn the temperature control dial **5** left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed control  button **7** all the way up and turn the driver's side temperature control dial **5** all the way to the right.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- To defog/defrost the rear window glass and outside mirrors (if so equipped), push the rear window defroster  switch **10**. Push the switch again to turn the defroster off. This function automatically turns off after approximately 20 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

HEATED STEERING WHEEL AND SEATS (if so equipped)

HEATED STEERING WHEEL (if so equipped)

- Push the  switch **1** to warm the steering wheel after the engine starts. The indicator light **2** on the heated steering wheel switch will illuminate.
- Once activated, the system will heat the steering wheel any cycle off and on to maintain a temperature above 86°F to 104°F (30°C to 40°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the  switch **1** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



HEATED SEATS (if so equipped)

- Push the  or  switch **3** to turn the heated seats on and off.
 - For high heat, push the switch once.
 - For medium heat, push the switch twice.
 - For low heat, push the switch three times.
- The heated seats turn on and off to maintain a temperature above 68°F (20°C).



GETTING STARTED

2ND ROW HEATED SEATS (if so equipped)

- To activate 2nd row heated seats, push the heated seat switch **4** located on the rear of the front center console. The indicator light on the switch will illuminate.
 - For high heat, push the switch once.
 - For medium heat, push the switch twice.
 - For low heat, push the switch three times.
- To turn 2nd row heated seats off, push the heated seat switch until the indicator light on the switch extinguishes.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the D position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the D position **2** to turn on the headlights.



INTELLIGENT AUTO HEADLIGHT SYSTEM

- The Intelligent Auto Headlight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and one of the doors is opened and if this condition is continued, the headlights remain on for 5 minutes.
- To activate the Intelligent Auto Headlight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the Intelligent Auto Headlight system, turn the headlight control switch to the OFF position, D position **1** or D position **2**.

HEADLIGHT BEAM SELECT

- With the headlights ON (either in the **AUTO** or D position), push the headlight control switch forward **4** to select the high beam function. The indicator light D will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

- To turn the fog lights on, turn the headlight switch to the D position **2**, then turn the fog light switch **6** to the D position.
- To turn the fog lights on with the headlight switch in the AUTO position, the headlights must be on, then turn the fog light switch **6** to the D position.
- To turn them off, turn the fog light switch to the OFF position

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- The fog lights will automatically turn off when the High Beam headlights are selected.

HIGH BEAM ASSIST

- To activate the High Beam Assist system, push the switch **7** as shown. The high beam assist indicator light in the meter will illuminate while the headlights are turned on.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Intermittent  – Front wipers operate intermittently, and the speed can be adjusted by turning the knob **2** up or down to increase or decrease wiper speed.
- 3** Low  – Front wipers operate at a continuous low-speed.
- 4** High  – Front wipers operate at a continuous high-speed.
- 5** Mist – Push lever up for one sweep operation of the front wipers.
- 6** Front Washer  – Pull the lever to have one sweep operation of the wiper.

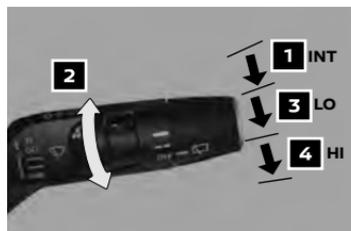

GETTING STARTED

REAR WIPER AND WASHER

- 7** Intermittent  — Rear wiper operates intermittently (not adjustable).
- 8** Low  — Rear wiper operates at a continuous low-speed.
- 9** Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

SUN VISORS

- Pull down the sun visor **1** to block glare from the front.
- Remove the sun visor from the center mount **2** by lifting it slightly and swing it to the side to block glare from the side window.



SLIDING FUNCTION

- Slide the sun visor out from the mount **3** to further extend the visor location.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Home
- Vehicle Speed
- Blank
- Drive Computer
- 4X4-i
- ECO Pedal Guide
- Navigation
- Compass
- Audio
- Driving Aids
- Warnings
- Settings
- Idling Stop
- ProPILOT Assist
- Fuel Economy
- Variable Compression Turbo
- Tire Pressures
- Speed Limit Sign



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the scroll/OK dial **2** and the ◀▶ buttons **3** located on the steering wheel.

- Press the scroll/OK dial **2** on the steering wheel to change or select an item.
- Press the ◀▶ button **4** on the steering wheel to go back to the previous menu.



RESETTING THE DRIVE COMPUTER

1. Press the ◀▶ buttons **3** located on the steering wheel until you reach the Drive Computer screen **5**.
2. Press and hold the scroll/OK dial to reset the selected drive computer (Manual Reset 1, Manual Reset 2, or Auto Refuel).



SETTINGS

The settings mode allows you to change the information (if so equipped) displayed in the vehicle information display, such as:

- VDC Setting
- Driver Assistance
- Unit/Language
- ECO Mode Setting
- TPMS Setting
- Factory Reset
- Clock
- Vehicle Settings
- Maintenance
- Customize Display
- Personal Display (if so equipped)
- Head-Up Display (if so equipped)
- Key-Linked Settings (if so equipped)



CHANGING THE METER SCREEN VIEW AND CHANGING HEAD UP DISPLAY (HUD) (if so equipped)

For the models with a full-screen display, the meter screen view can be changed to expand the vehicle information display area. To change the meter screen view:

1. Push the shortcut menu button **6** on the steering wheel.
2. "ShortCut Menu" will appear on the vehicle information display.
3. Select "Change Meter View" by rotating the scroll dial **2** and push it to make a selection.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

GETTING STARTED

OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, and the temperature range is -40 to 140°F (-40 to 60°C), the outside air temperature **1** will appear in the vehicle information display.
- If the outside air temperature mode is below 27°F (-3°C), the snowflake indicator **2** will be displayed.

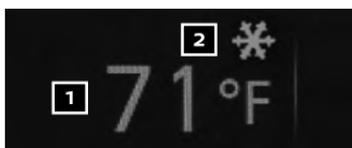

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires **3** (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Apply the brake.
 2. Push the **P (Park)** button and apply the parking brake.
 3. Place the ignition switch in the **ON** position. Do not start the engine.
 4. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.

Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

CAPLESS FUEL FILL AND FUEL-FILLER DOOR

FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the passenger's side of the vehicle.



CAPLESS FUEL FILL

- The fuel tank is not equipped with a fuel-filler cap.
- After opening the fuel-filler door, insert the fuel pump nozzle directly into the fuel-filler opening.
- When the fuel pump nozzle is pulled out, the fuel-filler opening will be sealed.



REFUELING FROM A PORTABLE FUEL CONTAINER

- If you need to refuel from a portable fuel container, use the funnel **2** stored in the tool bag under the luggage board.
- Be sure to insert the funnel into the fuel-filler opening slowly and fully. Insert the nozzle of the portable fuel container into the opening along the funnel and fill the fuel tank.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

ADJUSTABLE LUGGAGE FLOOR (if so equipped)

- There are multiple positions for the adjustable floor. The low-floor mode maximizes storage volume.
- The flat-floor mode eases loading and unloading of large items and also allows you to store items in the hidden area under the floor board.
- The Vertical Mode **1** allows you to organize your cargo in two separate areas.
- Refer to the tag attached to the cargo floor or to the owners manual for detailed instructions explaining how to move between the three modes.



GETTING STARTED

SINGLE LUGGAGE BOARD


- The single luggage board is held in place by retainer pins at the front of the floor board. To avoid damage to the pins when removing the floor board or accessing the spare tire under the floor board:

1. Lift the board slightly to clear the rear door sill.
2. Pull the board toward you through the door opening until the pins **2** disengage from the slide trim.
3. Lift the board to remove or access the spare tire.

- For further details on how to position the adjustable floors, please refer to the tag attached to the cargo floor or to the Owner's Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual

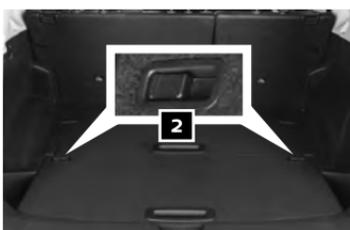

TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, Nissan recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency (section 6)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing and holding the  switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**. The liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- Pressing the  button **3** on the Nissan Intelligent Key® for more than 1 second.

GARAGE MODE SYSTEM (if so equipped)

- The liftgate can be set to open to a specific height by performing the following procedure:
 - Open the liftgate using the request switch or the Intelligent Key.
 - Pull the liftgate down and move it to the desired height position (the liftgate will have some resistance when being manually adjusted).
 - Push and hold the  switch **4** located on the liftgate for approximately 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1 through 3 for setting the position of the liftgate.
- When the liftgate is fully open and the Intelligent Key is carried, the liftgate will fully close and lock automatically by pushing the power liftgate lock switch **5** on the liftgate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Nissan Intelligent Key® within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper **1**. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



GETTING STARTED

AUTOMATIC MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the **OPEN** position **1** or the **CLOSE** position **2** and release it. The roof will automatically open or close. To stop the moonroof, push the switch once more while it is opening or closing.
- To tilt the moonroof open, press the switch **3** to the up position. To close the moonroof, push the switch to the **CLOSE** position **2**.



AUTO-REVERSE

When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

REAR SUNSHADE (if so equipped)

The rear door sunshade is located within the rear doors at the base of the window.

- To raise the sunshade, pull up the center tab **1**.
- Hook the sunshade slots onto the tabs **2** extending from the top of the window frame.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

JACK/TOOL STORAGE

Access to the Jack/Tool Storage is located in the storage area and luggage floorboards of the vehicle.

- The jack is located in the storage compartment **1** to the left inside the storage area.
 1. Remove the storage door by pressing the two release tabs simultaneously.
 2. Remove the jack by turning the spindle counterclockwise to relieve the pressure on the jack.
- The tool kit **2** is located under the luggage floorboards of the vehicle:



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

1. Remove the luggage floorboard **3**.
2. Lift the floorboards and locate the tool kit within the spare tire space.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency (section 6)" of your Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:


- Yes - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- Later - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.
- No (display may vary) - Skips the software update, the pop-up message is hidden and will not be shown again for the current software update.

You can trigger the software update manually in the event that "Later" or "No" was unintentionally pressed.


- To manually update the software to the latest version:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information".
 3. Touch "Software Update"
 4. Touch "Start Software Update" and then "Download".
- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.

Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:
 1. Press the **MENU** button on the control panel.
 2. Touch "Connections" and then touch "Wi-Fi".
 3. Touch the  icon and then touch "Wi-Fi" to turn it on.
 4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

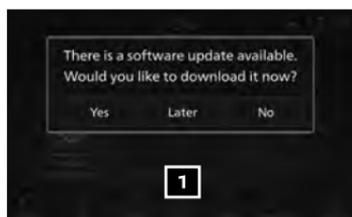


- To manually update your software using Wi-Fi:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information".
 3. Touch "Software Update", "Start Software Update" and then touch "Download".

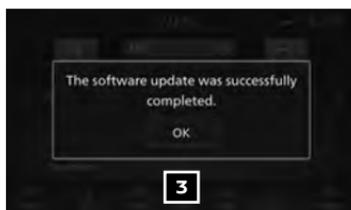

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

- To turn on automatic updates of map software:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information".
 3. Touch "Map Update" and then touch "Map Update Settings".
 4. Select an area to be updated and touch "Start".

- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.

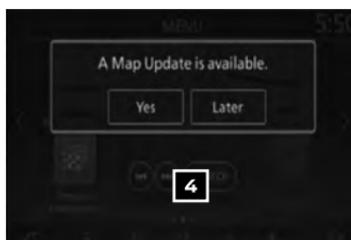

- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.

- To manually update the map software via Wi-Fi:
 1. Connect the vehicle to an available Wi-Fi network.
 2. Press the **MENU** button on the control panel.
 3. Touch "Info" and then touch "System Information".
 4. Touch "Map Update" and then touch "Update via Wi-Fi".
 5. Select an area to be updated and touch "Start".

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS




HOW TO USE YOUR ROGUE'S TOUCH-SCREEN DISPLAY

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.
- 4** Widgets - Useful information from primary menu functions can be displayed as widgets.
- 5** Shortcuts - Icons for frequently used menu items can be placed on the Home "MENU" screens as shortcuts.
 - Shortcut and widget selections can be set up in the "Customize Home Menu" screen which can be accessed by touching the **Settings** key **6** followed by the "Customize Home Menu" key **7**. This will display the "Filter" screen, which allows shortcuts and widgets to be added, replaced, rearranged, deleted **8** or reset **9**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

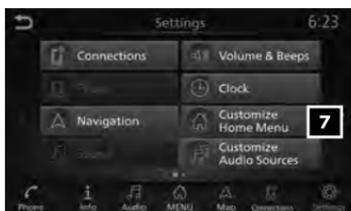

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Touch  Settings **1** on the Launch Bar.
2. Touch the "Clock" key.
3. Select "Set Clock Manually" **2**


to manually adjust the time displayed on the clock.

- "Set Clock Manually" is only available if the clock mode is changed to "manual".

- Press the  button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

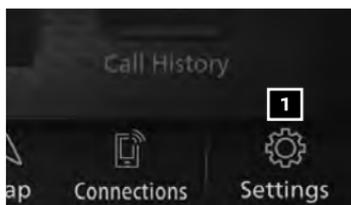

USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-C/USB Type-A) are located beneath the climate controls.
- When a compatible USB memory device is plugged into the USB connection port, compatible audio files stored on the device can be played through the vehicle's audio system.

CHARGE ONLY PORT (if so equipped)

- The USB charging ports **2** (USB Type-C/USB Type-A) are located on the back of the center console box. These ports, Type C **3** and Type A **4** will charge compatible devices.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or "Getting started (section 2)" of your NissanConnect® Owner's Manual.

HOW TO CONNECT YOUR PHONE/DEVICE

When connecting your cellular phone, there are two ways to connect your phone: via Bluetooth® or through a standard USB or USB-C cord.

To connect via Bluetooth®:

1. Push the **MENU** button and touch the "Connections" key.
2. Touch "Devices" and touch the "Add New" key. A message is displayed.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CORD CONNECTION

- Using a standard USB or USB-C cord, connect one end of the cord to your cellular phone, and the other to one of the USB connection ports **1** (USB Type-C/USB Type-A) located beneath the climate controls.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS


- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or the **BACK** on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.



- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

CONNECTING PROCEDURE

1. Touch the Phone key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Devices" key **3** and touch "Add New". A message is displayed.
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).

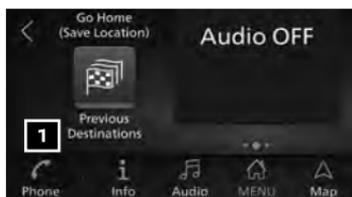

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Touch  Settings on the Launch Bar, then touch "Phone".
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



MAKING A CALL

1. Press the  Phone button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.



RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To End or reject a call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen, or
 - Touch the  Hang Up key on the screen.



* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual and the **"Hands-free phone (section 4)"** and the **"Voice recognition (section 7)"** of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS



FM/AM/SiriusXM® RADIO

1 POWER /VOL

- Press the **POWER**  button to turn the system on or off.
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

2 TUNE-SCROLL/PUSH SOUND DIAL

- Press the **PUSH SOUND** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

4 AUDIO BUTTON

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key (1-12). The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (1-12).

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Audio system (section 3)" of your NissanConnect® Owner's Manual.

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.



- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the **MENU** button on the launch bar.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  Apple CarPlay key **2**,
 - or
 - Touch the  Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.



- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the Nissan key.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Smartphone Connection” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

WIRELESS CHARGING (if so equipped)

The wireless charger is located on the lower part of the instrument panel. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad over the "Qi" logo **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position.



- The indicator (🔌) will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route. Features such as Premium Traffic can give detailed traffic information.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle is in motion. The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- 1 MENU** button – Press this button, then touch “Map” on the Launch Bar to get to the Navigation screen.
- 2**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE-SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3 VOLUME** control knob – Turn right to increase the volume or left to decrease the volume.
- 4**  key – Touch to zoom the map out.
- 5**  key – Touch to zoom the map in.
- 6 TUNE-SCROLL** knob – Turn to scroll through the items in a list. Press to select a menu item.
- 7**  **BACK** button – Press to return to the previous screen.
- 8** Touch-screen display

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.
- For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call **1-855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. For frequently asked questions, please visit www.nissanusa.com/connect/faq.
- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the Emergency Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.


■ **Connection to Roadside Assistance** - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching the  headset icon **1** on the map screen.



- **Stolen Vehicle Locator** - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock** - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Remote Engine Start** - Start your engine remotely using the NissanConnect Services companion app or website.
- **Journey Planner** - A feature that allows you to send a route with a destination and up to five way points directly to the vehicle.
- **Boundary Alert** - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert** - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- **Alarm Notification** - This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Connected Search** - Select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.
- **Valet Alert** - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert** - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the **MENU** button **2** on the control panel.
- Touch the **i** Info key.
- Touch the "NissanConnect Services" key **3**.

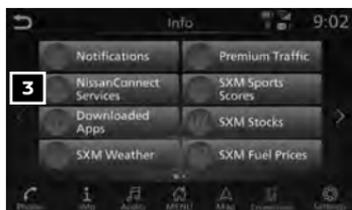

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch screen display.
 - Touch "Store" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
 - Touch "Start" to start route guidance.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

VOICE RECOGNITION

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button **1** on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button **1** on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button **1** on the steering wheel.



* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual and the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 6)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch  Settings key on the Launch Bar.
 2. Touch the "Connections" key.
 3. Touch the "Wi-Fi" key **1**.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

4. Touch the name of the device you wish to connect.
5. Enter a password and touch the "OK" key. The device will be connected.

- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key **1**.
4. Touch the  key **2**.
5. Touch a preferred item.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

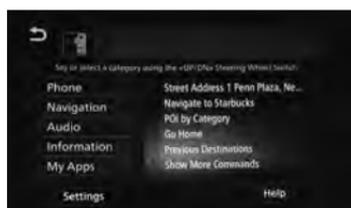

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

AMAZON ALEXA INTEGRATION (if so equipped)

- Alexa can be used as a Virtual Personal Assistant. You can log in to your amazon account and use Alexa like you would with an Amazon speaker device.
- To get to the Amazon Alexa screen:
 1. From the Menu screen, press the Info key **1**.
 2. Touch the Downloaded Apps key **2**.
 3. Touch the "Alexa" key **3**.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the your NissanConnect® Manual or www.nissanusa.com/connect/features-apps/nissanconnect-services-amazon-alexa-skill.



FUNCTIONS DISABLED WHILE DRIVING

Functions Disabled while Driving allows the passenger in the vehicle to access some of the vehicle functions while the vehicle is moving.

TO ACTIVATE SEAT LOCK-OUT and UNLOCKING FUNCTIONALITY

- When the vehicle detects a person on the front passenger seat with a seat belt fastened, some of the functions can be unlocked by touching "Accept" on the message screen, which appears when available.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

DRIVING FEATURES

ELECTRONIC PARKING BRAKE

ELECTRONIC PARKING BRAKE

- To apply the parking brake, pull the electronic parking brake switch **1**, located on the center console, behind the electronic shift lever. The electronic parking brake indicator light **2** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **1** down. The electronic parking brake indicator light (red) **2** will turn off.



AUTOMATIC BRAKE HOLD

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **3** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The transmission is not in the **P (Park)** position.
 - The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the automatic brake hold switch **3**. To deactivate while the brake force has been maintained, depress the brake pedal and push the automatic brake hold switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC) (for vehicles with ProPILOT Assist)
 - Intelligent Forward Collision Warning (IFCW)



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- The “Forward Driving Aids temporarily disabled Front Sensor blocked See Owner’s Manual” warning **3** may illuminate if the front radar sensor **2** is obstructed.



- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.



- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears or the warning light illuminates, stop the vehicle in a safe place, press the **P (Park)** button, and turn the engine off. Clean the radar sensor areas and restart the engine. This may mean cycling the windshield wipers and turning on the windshield defrost for a few minutes. If the message and light continue to appear after cleaning radar sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls (section 2)” and the “Starting and Driving (section 5)” of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's blind spot detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.
- The indicator **1** will temporarily illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).



INTELLIGENT BLIND SPOT INTERVENTION (I-BSI) (if so equipped)

- The I-BSI system helps alert the driver of other vehicles in adjacent lanes when changing lanes, and helps assist the driver to return the vehicle to the center of the traveling lane.
- The I-BSI ON indicator light on the instrument panel will illuminate when the I-BSI system is turned on.


DRIVING FEATURES

- To turn on the I-BSI system, push the  switch **2** on the steering wheel.
- The I-BSI system operates above approximately 37 mph (60 km/h). If the system detects a vehicle in the detection zone and your vehicle is approaching the lane marker, the I-BSI system provides an audible warning (three times), flashes the side indicator light **1** and the I-BSI system activates to help return the vehicle back to the traveling lane.
- The I-BSI system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

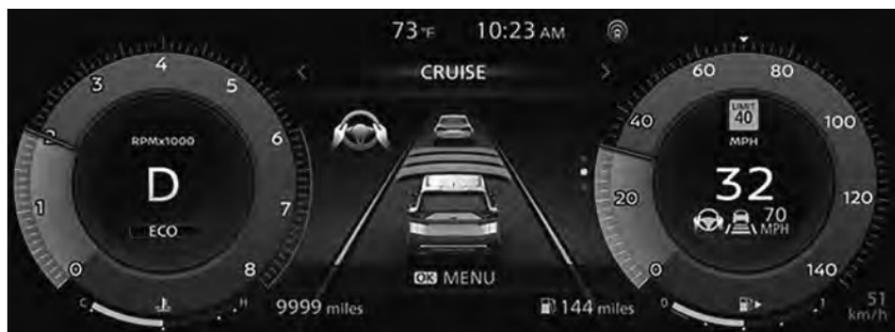

PROPILOT ASSIST (if so equipped) AND PROPILOT ASSIST WITH NAVI LINK (if so equipped)

The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on freeways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

- To turn on ProPILOT Assist:
 - Push the ProPILOT Assist  switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
 - When at the desired speed, push the toggle switch **2** down toward **SET-** to activate ProPILOT Assist.
 - Push the distance switch **3** to select the following distance.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

When activated, the ProPILOT Assist display will override any previous display. To disable this override, go to "Settings", "Customize Display" and select OFF for "Transition (cruise)".

- 4** Vehicle set speed indicator
- Displays the speed set by the driver.

- 5** Steering Assist indicator
- Shows whether Steering Assist  is active or not: (green-active, gray-standby).

- 6** Lane marker indicator
- No lane makers displayed: Steering Assist is turned off
 - Gray: No lane markers detected, steering assist in standby
 - Green: Lane markers detected, Steering Assist active
 - Orange: Lane departure, warning is activated

- 7** ProPILOT Assist status indicator
- Displays whether ProPILOT Assist is active or not.
 - White: Standby
 - Blue: Active

- 8** Vehicle ahead detection indicator
- Appears on the display  when a vehicle is detected ahead.

- 9** Set distance indicator
- Displays the selected distance  set by driver.



CANCELLING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **10** on the steering wheel.
 - Tap the brake pedal.
 - Push the ProPILOT Assist switch **1**.

PROPILOT ASSIST

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **2** toward **RES+** or **SET-** and release it. Push and hold the toggle switch to change in increments of 5.
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.

INTELLIGENT CRUISE CONTROL

- The system may not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone. The driver must control the vehicle to prevent a collision.

DRIVING FEATURES

- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the toggle switch **2** towards **RES+** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

STEERING ASSIST

- When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
 - This feature can operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
 - With the Steering Assist active, when a curve or strong cross wind exceeds the capabilities of the system and your vehicle approaches either the left or the right side of the traveling lane, the I-LI system will flash the I-LI indicator on the vehicle information display and provide steering wheel vibration to alert the driver.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signal is activated.
 - Hands are not detected on the steering wheel. Simply apply gentle torque to the steering wheel.
 - Steering Assist will not activate or may deactivate if the system does not detect clear and consistent lane markers.


To turn off Steering Assist:

- Push the  Steering Assist switch **11** on the instrument panel to the left of the steering column or in the settings of "Driver Assistance" in the vehicle information display.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see the Owner's Manual.



HANDS ON DETECTION

- If the driver lightly touches the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings **12** may occur. When the driver holds and operates the steering wheel again (applies gentle torque in one direction), the warnings turn off.
- If the driver does not place their hands back on the wheel or cancel the ProPILOT Assist, the vehicle warnings will continue and the vehicle will eventually come to a stop.

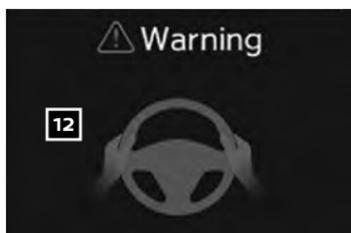

PROPILOT ASSIST WITH NAVI LINK (if so equipped)

- ProPILOT Assist with Navi Link has all the same features of ProPILOT Assist and includes a link to navigation to provide new features like "Speed Limit Assist" and "Speed Adjust by Route".

SPEED LIMIT ASSIST

- When ProPILOT Assist with Navi Link is active and it detects a change of the speed limit, the new speed limit sign value is indicated **13** (green outline around sign icon) and after the driver accepts the new SET speed, the vehicle SET speed is changed.
 - To accept the new SET speed, the driver presses the toggle switch up to accept a higher speed or press down to accept a lower speed.
 - If you wish to maintain the current SET speed, no action is required.
 - If Speed Limit Assist is set to "AUTO" mode, the SET speed will automatically change (no driver action required).
- To change the "Speed Limit Assist" mode (OFF, Manual, AUTO), see the "Driver Assistance" section of the vehicle information display.



SPEED ADJUST BY ROUTE


- When ProPILOT Assist with Navi Link is active on the freeway, the system uses road information **14** provided by the navigation system to help reduce the vehicle speed. When approaching tight curves, this speed reduction helps the driver maintain lane center when Steering Assist is active. When approaching exits, it helps reduce vehicle speed through the exit ramp. However, in all situations, the driver needs to maintain vehicle control and apply braking whenever necessary. For best results, a route must be set using in-vehicle navigation.
 - To turn the system OFF, "Speed Adjust by Route" settings can be found in the "Driver Assistant" section of the vehicle information display.



DRIVING FEATURES

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a fixed speed between 20 to 90 mph (30 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch **1** for longer than 1.5 seconds.
- When at the desired speed, push the toggle switch down toward to **SET-** **2**.
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **2** toward **RES+** or **SET-** and release it.
- The conventional (fixed speed) cruise control mode display and indicators **15** are displayed in the vehicle information display.
- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and then press and release the switch to turn on ProPILOT Assist ICC mode.

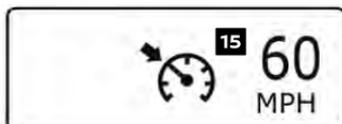


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or unique traffic conditions. Clean/defrost your windshield and/or cleaning sensor to keep this feature is working properly. Please refer your Owner's Manual for more information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the cruise control switch **1** on the steering wheel. The indicator will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the toggle switch **2** down toward **SET-** or up toward **RES+** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push the toggle switch **2** up towards **RES+** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push the toggle switch down **2** towards **SET-** on the steering wheel. Release the switch when the vehicle slows to the desired speed.

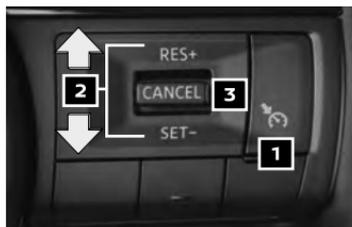

- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **3** on the steering wheel.
- To turn off cruise control, push the cruise control switch **1** on the steering wheel, tap the brake pedal or push the cruise control switch on the steering wheel. The  indicator light in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle, cyclist or pedestrian ahead in the traveling lane.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **1** and audible warning. In addition, the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.
- If the warning light **2** illuminates, blinks, or the "Forward Driving Aids temporarily disabled Front Sensor blocked" message appears, this indicates the camera may be obstructed. Use the wipers and defrost mode to help clear camera obstruction (dirt, condensation, etc).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES


INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.




- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Start from any Control Panel screen

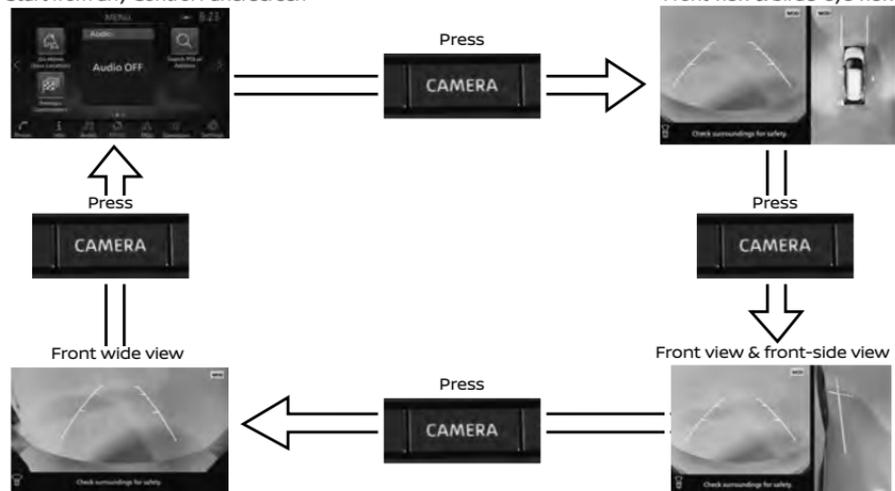


- When the electronic shift lever is in the **R (Reverse)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

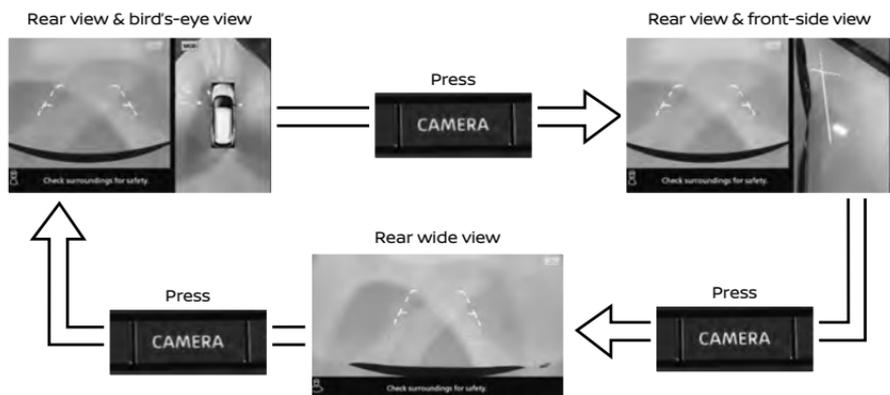

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View[®] Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.
- Objects in the bird's-eye view will appear farther than the actual distance.

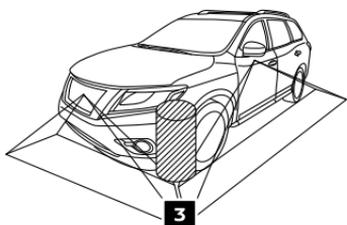

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Green **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

DRIVING FEATURES

DRIVE MODE SELECTOR

AUTO

- Auto drive mode  is recommended for normal, everyday driving and is the default mode of your vehicle.

OFF-ROAD (AWD ONLY)

- OFF-ROAD mode allows for easier driving or starting on a bumpy road surface, such as an uneven dirt road, steep uphill slope or through sand.
 - Turn the Drive Mode Selector **1** to select **OFF-ROAD** mode **2** which will appear in the vehicle information display.



SNOW (AWD ONLY)

- SNOW mode is recommended to help aid driving on snowy and frozen roads.
 - Turn the Drive Mode Selector **1** to select **SNOW** mode **3** which will appear in the vehicle information display.



ECO

- ECO mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Turn the Drive Mode selector **1** to select **ECO** mode **4** which will appear in the vehicle information display.

SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Turn the Drive Mode selector **1** to select **SPORT** mode **5** which will appear in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The Rear Automatic Braking (RAB) system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and braking will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.
- When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side lane marking.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side lane marking, the LDW system will vibrate the steering wheel and the orange LDW indicator **1** on the instrument panel will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The I-LI is turned on by pushing the ProPILOT Assist switch **2** on the steering wheel.



DRIVING FEATURES

- The LDW system can be turned on or off through the “Driver Assistance” menu in the vehicle information display and the I-LI can be turned on or off with the ProPILOT Assist switch on the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls (section 2)” and the “Starting and driving (section 5)” of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill start assist will operate automatically under these conditions:
 - The transmission is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill start assist will not operate when the transmission is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Attention Alert **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls (section 2)” and the “Starting and driving (section 5)” of your Owner's Manual.



IDLING STOP SYSTEM (if so equipped)

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- Use this system while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop system, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop system by pushing the Idling Stop OFF switch **1**.
- The status of the Idling Stop System can be checked in the vehicle information display.
 - This indicator **2** is displayed when the idling Stop System is activated.
 - The indicator **2** blinks when the Idling Stop System is malfunctioning.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FRONT AND REAR SONAR SYSTEM (if so equipped)

- The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D (Drive)** position and both front and rear obstacles when the shift lever is in the **R (Reverse)** position.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

- The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror and displays the detected signs in the vehicle information display.
- The TSR system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed
- Navigation
- Driving Assist
- Traffic Sign
- Audio
- TEL/SMS

- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.
- To adjust the Head Up Display settings, when the system is on:

1. Press the ◀▶ arrows on the steering wheel until you get to the “Settings” menu in the vehicle information display. Press the scroll/OK dial to make your selection.
2. Press the scroll/OK dial to select “Head-Up Display” **2**.
3. Adjust the positioning of the Head Up Display on the windshield by making a selection and scrolling the scroll/OK dial **3** on the steering wheel to adjust features such as the height **4** and brightness **5**.

The following features can be adjusted through the “Settings” menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Content Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls (section 2)” of your Owner's Manual.



MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2023/rogue or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

