 




Read all instructions BEFORE  
assembly and USE of product.  
KEEP INSTRUCTIONS FOR  
FUTURE USE.

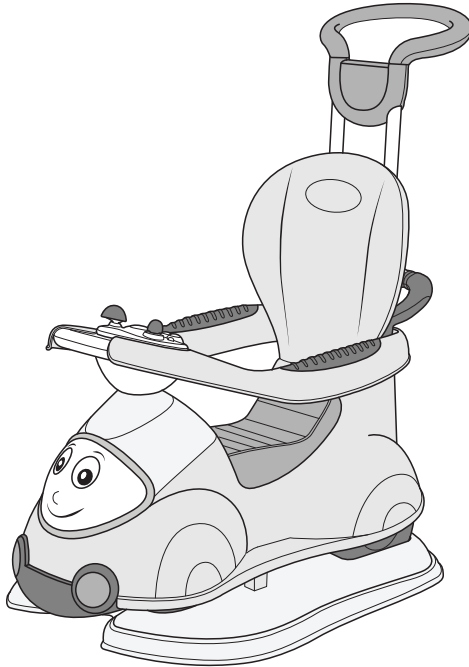

# 4-in-1 Ride On Car

Owner's Manual



**Failure to follow these warnings and the instructions could result in serious injury or death**

 
- PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFETY OF YOUR CHILD.
- ALWAYS PROVIDE THE SUPERVISION NECESSARY FOR THE CONTINUED SAFETY OF YOUR CHILD. NEVER LEAVE CHILD UNATTENDED.
- Adult assembly required.
- The un-assembled toy and shipping box may contain items with potentially hazardous sharp edges or sharp points, and/or small parts that are a choking hazard to young children - Please keep them out of reach of children.
- **Suffocation Hazard:** Plastic bags can be dangerous. To avoid danger of suffocation, keep bag away from babies and children. Properly dispose of any plastic bags or any other packaging materials.
- ALWAYS keep child in view when they are using this toy.
- This product is intended for children 9 months of age, or able to sit up unassisted.
- Before each use, check this product for damaged, loose fitting, or missing parts. Make sure that all fasteners are properly tightened and that the components are securely attached. DO NOT use this product if any parts are missing, damaged, or broken. Contact Chicco for replacement parts and instructional literature if needed. DO NOT substitute parts.
- Only use this toy on flat surfaces without any obstacles. Never use this toy in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water.
- Avoid serious injury from falling or sliding out. Make sure the armrests are securely fastened in the ROCKER and PUSH 'N GO modes. To avoid tipping, Never use the toy in the Push and Walk and/or Sit 'n' Ride modes with the armrests assembled.
- Make sure the child wears properly secured shoes.
- Never allow more than one child to use this toy at one time.
- Each of these modes requires a different level of ability to be able to avoid falls or collisions - Make sure your child's development allows them to safely use this toy.

## 4 in 1 Modes

4 in 1 Ride on toy – Ages 9 - 36 months.  
Maximum child's weight: 44 lbs/20 Kg


This product is designed to adjust to your child's growth:

1. Rocker (9 – 12 months)
2. Push 'N Go (9 – 18 months)
3. Push 'N Walk (12 – 18 months)
4. Sit 'N Ride (18 – 36 months)

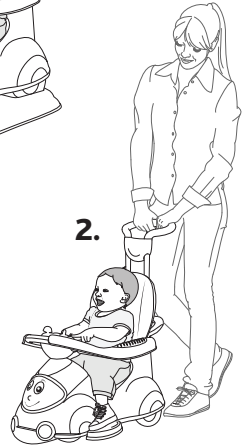

## Parts List

 **A.**

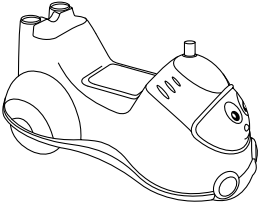


A. - Car Body

**B.**



 B. - Steering Wheel

**C.**

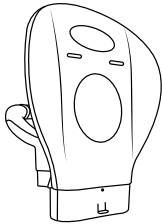

C. - Backrest/handle for child


**D.**



 D. - Seat


## Parts List

**E.**

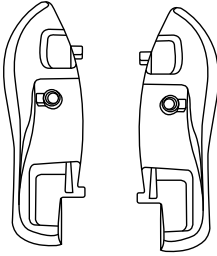


E. - Left and Right Rocking Base

**F.**

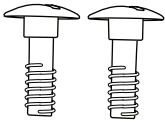 


F. - Rocking/Footrest Screws

**G.**

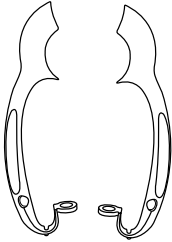 

G. - Left and Right Armrest


**H.**

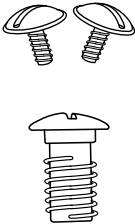 

H. - Armrest Screws


## Parts List

 I.

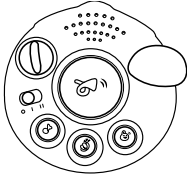


I. - Activity Center

 J.




J. - Left and Right Footrest

 K.

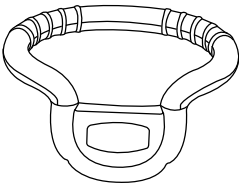

K. - Parent Handle

 
L.

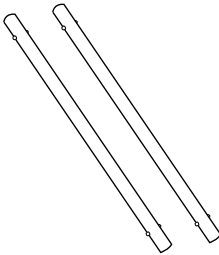

L. - Extension Bars

## Ride On Car Assembly

 
1

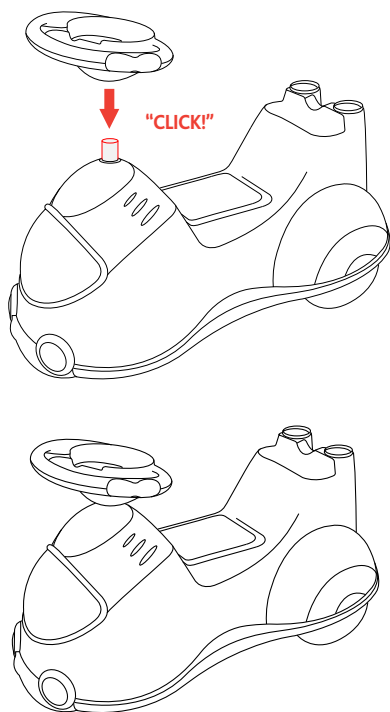

1. Attach Steering Wheel (B) to Car Body (A) as shown. The Steering Wheel can only be attached in one direction. Push down on the center of the Steering Wheel until you hear it click into place. Pull up on the Steering Wheel to make sure it is securely fastened to the frame.

## Ride On Car Assembly

 2

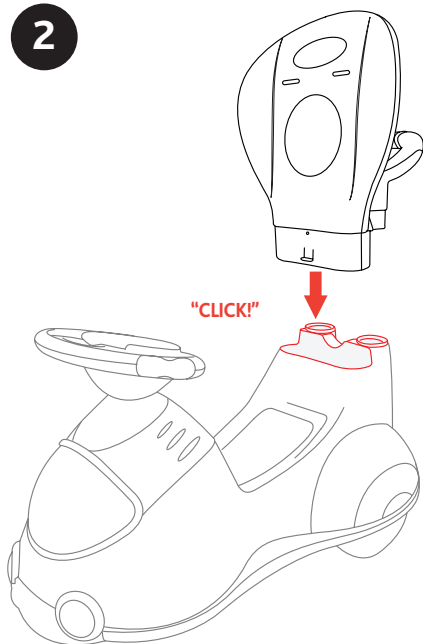


2. Line up the Backrest/handle for Child (C) to the Car Body as shown and push down until you hear it click into place. Pull up on the Backrest to make sure that it is securely attached to the frame.





## Ride On Car Assembly

 3

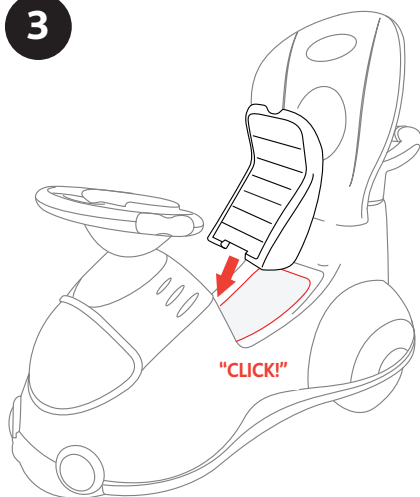


  3. With the Seat (D) in a vertical position, attach it to the frame as shown. It will click into place on both sides of the seat to create a hinge, for access to the storage compartment under the Seat.

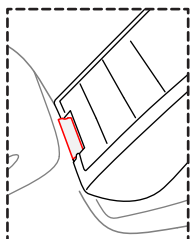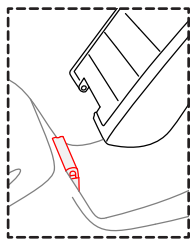

## Ride On Car Assembly

 4

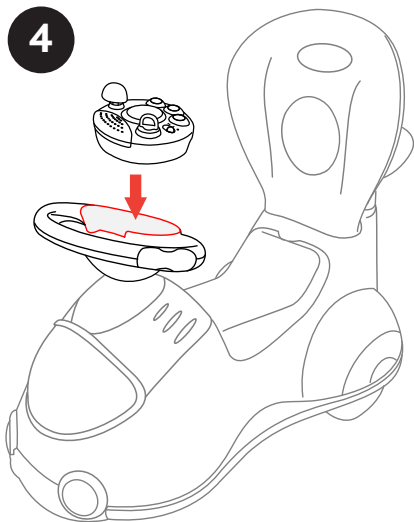


4. Insert Activity Center (I) into the Steering Wheel and press down.

## Rocker Mode Assembly

 
5A

Left Armrest

Right Armrest

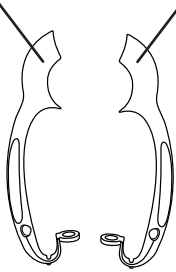


 5A. Attach the Right Armrest (G) first, fit the ring into the back of the Backrest and onto the Steering Wheel.

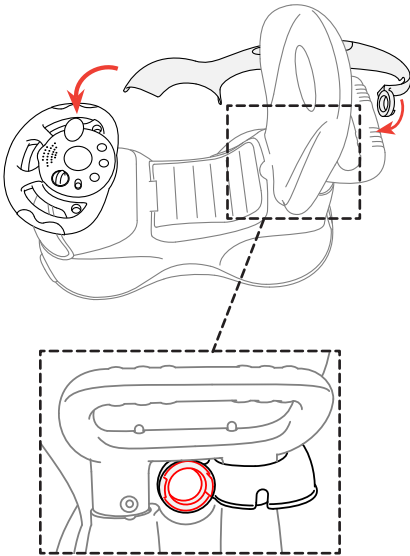

## Rocker Mode Assembly

 
5B

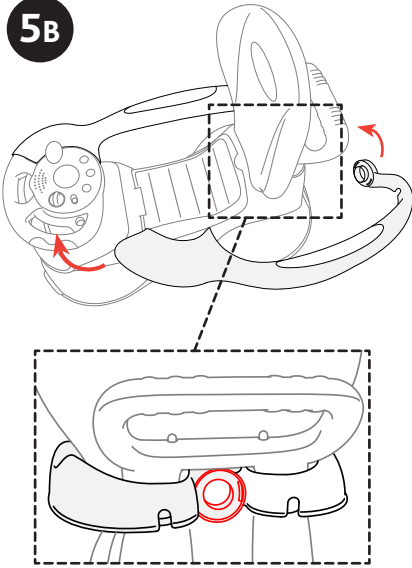

5B. Attach the Left Side Armrest (G), fit the ring on top of the Right Side Armrest ring at the back of the Backrest and onto the Steering Wheel.

## Rocker Mode Assembly

 
5c

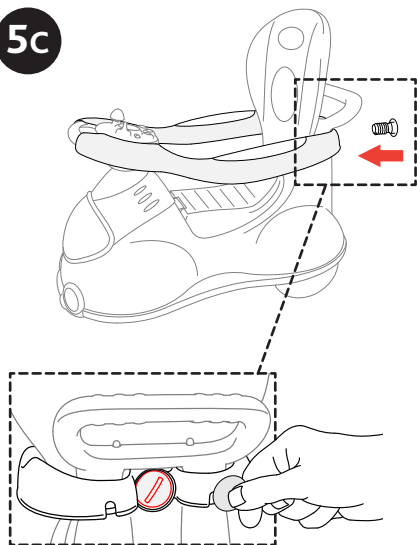

5C. Insert the largest Armrest Screw (H) into the back of the Backrest, through the Armrest rings. Use a coin to tighten the screws.

## Rocker Mode Assembly

 5D


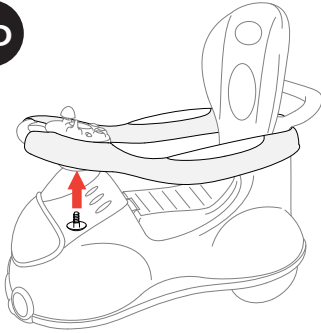


5D. Secure the Left and Right Armrest with a small Armrest Screws (H) under the Steering Wheel as shown. Use a coin to tighten the screws.

## Rocker Mode Assembly

6

  6. Attach Left and Right Rocker Base (E) as shown. Secure them with Rocker/Footrest Screws (F) as shown. Use a coin to tighten the screws.

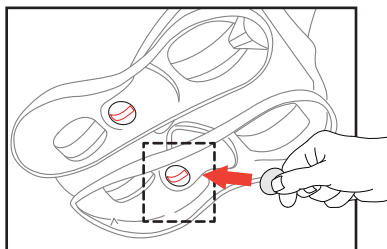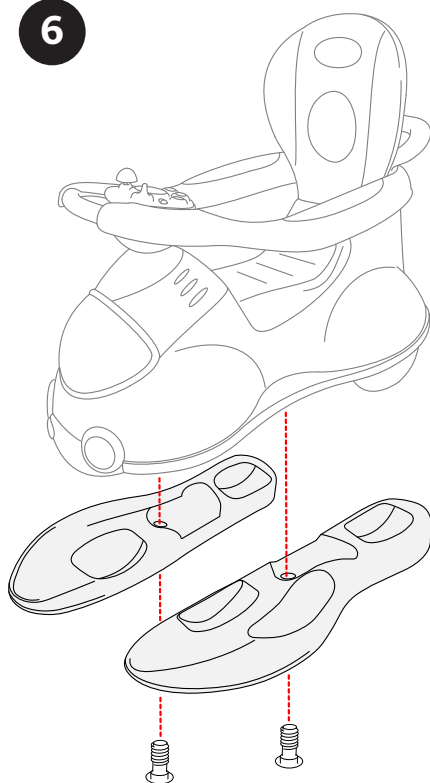

## Rocker Mode Assembly

7

 


7. Rocker (recommended for 9 to 12 months of age)



## Push 'n Go Mode Assembly




8

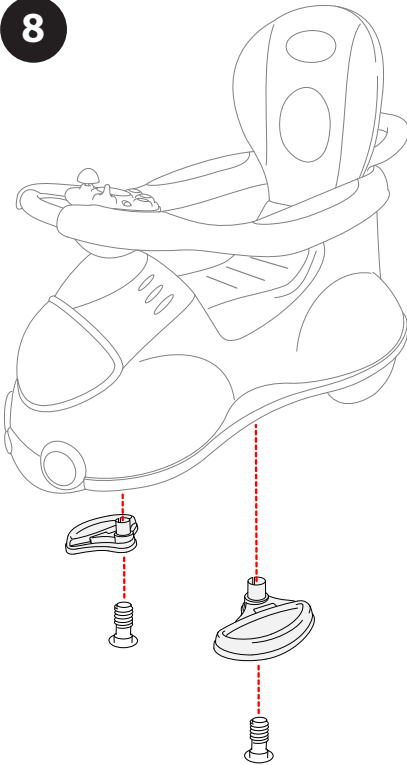

8. To create the Push 'n Go Mode: Remove Left and Right Rocking Base and replace them with the Left and Right Footrest (J). Secure the Footrest with the same screws, tighten with a coin.

## Push 'n Go Mode Assembly

   
9A

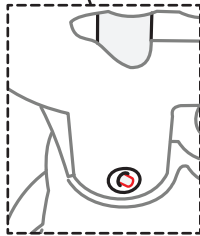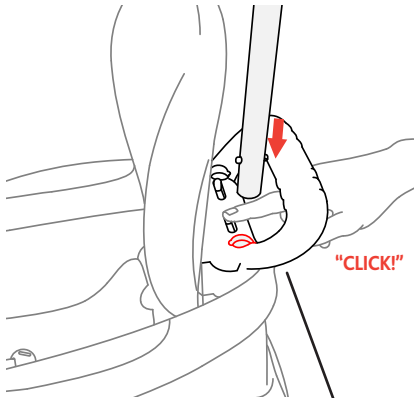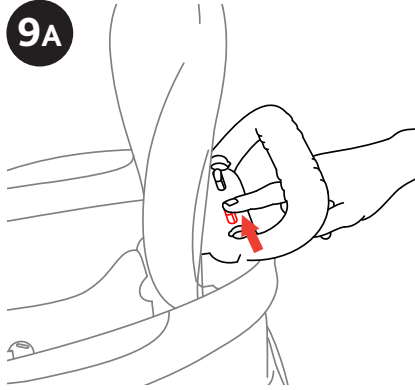


9A. Insert both Extension Bars (L) into the back of the Backrest as shown. Slide the tab over to open, insert the Extension Bar and push down until it clicks into place. Repeat for the other side.

## Push 'n Go Mode Assembly

 9B

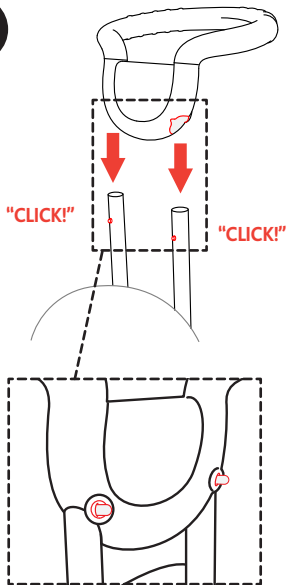

 9B. Attach the Parent Handle (K) to the Extension bars. Line up the bars and push down until they click into place.

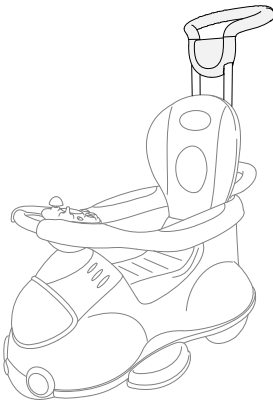

## Push 'n Go Mode Assembly

9c

9C. Push 'n Go (recommended for 9 to 18 months of age)



## Push 'n Walk Mode Assembly

10



Push 'n Walk (recommended for 12 to 18 months of age)

10. Remove the Footrests, Armrests, and the Parent handle. Refer to steps 5, 8 and 9 to remove the components. The car is assembled in the Push 'n Walk Mode.

## Sit 'n Ride Mode Assembly

 
11



Sit 'n Ride (recommended for 18 to 36 months of age)

11. The Car is assembled in Sit 'n Ride Mode.

## Fitting and/or Replacing Batteries

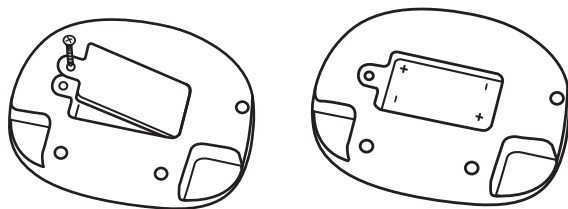

To replace the batteries:

Remove the battery cover with a Phillips head Screwdriver. Install two AA batteries matching the polarity indicated inside battery compartment and re-attach the battery cover.

### **⚠ WARNING**

The Activity Center requires 2 x AA 1.5 Volt alkaline type batteries (not included).

- Only use alkaline batteries of the same type .
- Never mix new and old batteries, or different types of batteries, alkaline, carbon-zinc, ni-cad.
- Do not attempt to recharge non-rechargeable batteries: they might explode.
- The use of rechargeable batteries is not recommended as the toy panel may stop working properly.
- If rechargeable batteries are used, take them out of the toy before recharging them. Batteries must always be recharged under adult supervision.
- Always remove spent batteries from the Activity Center to avoid the danger of possible leakage from the battery damaging the product.
- Do not burn or dispose of spent batteries into the environment. Dispose of spent batteries at an appropriate differentiated collection point.
- Remove the batteries from the Activity Center before disposing of the product.
- Always remove the batteries if the Activity Center will not be used for a long period.
- Batteries must only be fitted by an adult.
- Always keep batteries and tools out of reach of children.
- Do not short-circuit the battery terminals.
- If the batteries happen to leak liquid, replace them immediately, making sure you clean the compartment beforehand; wash your hands thoroughly if you come into contact with any such liquid.

## Cleaning and Maintenance

### CLEANING / MAINTENANCE

Clean the toy with a soft cloth, lightly dampened with water if necessary. Do not completely submerge the toy in water. Clean Activity Center with a soft, dry cloth to avoid damaging the electronic circuit. Protect the toy from collisions, heat, dust, sand, humidity and water.

## FCC Information

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.



## For More Information

For USA customers :

If you have any questions or comments about this product, or are missing any of the parts. Please do not return this product to the store. Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com



www.chiccousa.com



1826 William Penn Way  
Lancaster, PA 17601



[www.chiccousa.com](http://www.chiccousa.com)