

# MOTORHEADS

AGES  
6+

## CONTENTS

 
- 1 x RC Car with Red Titan Motorhead
- 1 x Mystery Motorhead
- 1 x Action Controller
- 1 x USB Charging Cable



## PIT STOP



BOTTOM OF HEAD

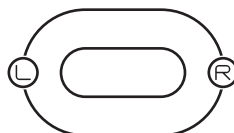

UNDERSIDE OF CAR

### Changing Drivers

Change out the driver depending on your racing needs. Each Motorhead changes the feel of the car, and each head has its own unique sound. The more dots underneath a Motorhead the higher the top speed. Choose wisely, faster does not mean better control.

### Race Car Alignment

To fine tune steering control, locate the alignment switch on the underside of the chassis. Starting with the switch in the middle position, test drive your car and adjust as needed. Should your car pull to the left or right, simply move the switch until your car drives straight without touching the directional controller.

## PLAY

 
### Power!

1. Insert 2 AA 1.5V batteries (not included) into the controller.
2. Car comes with a built-in 3.7V 1500mAh rechargeable Li-ion battery. Charge the car by plugging the the car to a 5V adapter or USB port using a USB cable. The red LED charging indicator will light up during charging and turn off when fully charged.

### Set!


1. Create a racetrack in your favorite location.
2. Insert Motorhead driver (facing forward) then turn the car and remote on.

**NOTE:** Press the button on the controller once to turn it on, press and hold the button 3 seconds to turn it off.

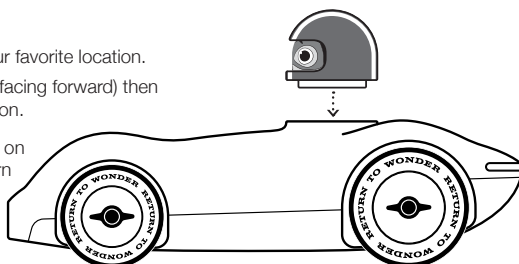

### Go!

 1. Use the controls on the remote to steer your racer.
2. Add excitement to the race by using the music and horn buttons.

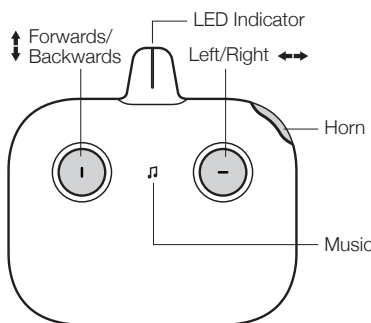

### Brake

When the car is moving (forward or backward), you can brake the car by moving the control in the opposite direction.

 
## LOW BATTERY INDICATION

- CAR** The white LED on bottom of car will flash every 2 seconds when battery is low.
- REMOTE** The white LED on the remote control will flash every 2 seconds when battery is low. It will turn itself off after 10 flashes.

## MYSTERY MOTORHEADS




CRAZY EYES



LADY LANE



 JUGGERNAUT

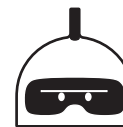

MOHO

### SAFETY WARNINGS

- Not for children under the age of 6.
- Avoid water when operating.
- Do not use people or animals as obstacles.
- Never operate your vehicle on the street or highway.
- Do not run car into furniture objects or hard surfaces as this will cause damage to both the objects and car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while car is switched to "ON".
- Do not expose to extreme temperatures or moisture.
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating car.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

### RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged or misused.
- Do not dismantled, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperature or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge battery using the provided charger, cable and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Examine the battery charger regularly for damage to the cord, plug, enclosure and other parts. If there are damages, do not use the charger until they have been fixed.
- Recycle or dispose of battery according to federal, state and local laws.
- Keep these instructions for future reference.

### BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FAO® and FAO Schwarz® names and logos are trademarks or registered trademarks. Distributed by and © 2020 MerchSource, LLC. Irvine, CA 92618. All rights reserved.  
TM & © REMKA  
Model No.: 1012923  
Printed in China



**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

**WARNING:**  
CHOKING HAZARD—Small Parts.  
Not for Children under 3 years.

11"

8.5"